



Application:

Dodge Caliber | Jeep Patriot, Compass

Tools:

None

Location of cabin filter:

Behind the glove compartment



To remove existing filter:

1. Open glove compartment
2. Squeeze sides of glove compartment to release past the stops. See **Figure 1**.
3. Remove the housing cover. See **Figure 2**.
4. Replace the old filter with the new one.
5. Repeat steps 1 - 3 to finish installation.

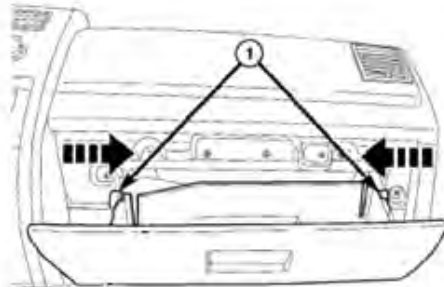


Figure 1

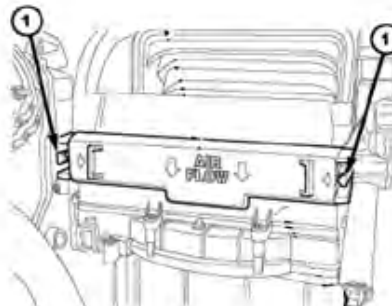


Figure 2



Aplicación:

Dodge Caliber | Jeep Patriot, Compass

Herramientas:

Ninguno.

Lugar del filtro de cabinas:

Detrás de la guantera.

Para quitar los filtros existentes:

1. Abra la guantera.
 2. Exprima los lados de la guantera para lanzar más allá de las paradas. Véase el **cuadro 1**.
 3. Quitar la cubierta de la cubierta. Véase el **cuadro 2**.
 4. Sustituya el filtro viejo por el nuevo.
 5. Repita los pasos 1 - 3 para acabar la instalación.
-

Application :

Dodge Caliber | Jeep Patriot, Compass

Outils :

Aucun.

Emplacement des filtres de l'habitacle :

Derrière le compartiment de gant.

Pour retirer les filtres existants :

1. Ouvrez le compartiment de gant.
2. Serrez les côtés du compartiment de gant pour libérer après les arrêts. Voir le **schéma 1**.
3. Enlever la couverture de logement. Voir le **schéma 2**.
4. Remplacez le filtre ancien avec le neuf.
5. Répétez les étapes 1 - 3 pour finir l'installation.